

NDT Supply.com, Inc.

7952 Nieman Road
Lenexa, KS 66214-1560 USA



Phone: 913-685-0675
Fax: 913-685-1125

sales@ndtsupply.com
www.ndtsupply.com



PRECISION BORESCOPIES

Hawkeye® Classic Flexible Video Borescope

This non-articulating, flexible video borescope offers lower cost while still delivering portability and image capture. The plastic coated, stainless steel gooseneck sheath "takes a set" before insertion into a cavity. You can view "straight-ahead" at a 0° DOV, or "sideways" at a 90° DOV (Direction-of-View).



Table of Contents

Set Up	Page 3
Operation	Page 5
Troubleshooting	Page 12
Specifications.....	Page 13

Hawkeye® Classic Flexible Video Borescope

The Hawkeye® Classic Flexible Video Borescope consists of two main parts: the Portable Video Monitor (PVM), and the Insertion Tube. The insertion tube contains the video camera and LED light source at its tip.

Begin by connecting the insertion tube to the PVM. Hold the 12-pin connector on the end of the insertion tube against the mating socket on the PVM. Rotate the connector until it lines up properly so the pins will enter the socket. Then tighten down the knurled ring to secure.

The PVM displays live video and captured still or video images on its built-in LCD display. It can output live video to an external monitor via a composite signal connector and the included cable. Stored images can be downloaded to a computer via the USB port and included cable, or through the removable SD memory card.

Insertion Tube



Portable Video Monitor (PVM)

Installing the SD Memory Card

Take care to insert the SD card with the correct orientation – contacts should be visible when inserting the card with the video display screen facing you.



CAUTION: Do not remove the SD memory card during capture operations – data will be lost and the memory card may be damaged.




Charging the PVM

To charge the PVM, connect the charger lead to the jack labeled DCIN on the PVM. Then plug the charger into a 100-240 V, 50/60 Hz outlet. Full charge takes about 2 hours. The PVM will not operate with the charger plugged in when the battery is nearly fully charged.

Note: There is no charging indicator light. The battery status indicator will appear in the display when booting up.



Main Controls

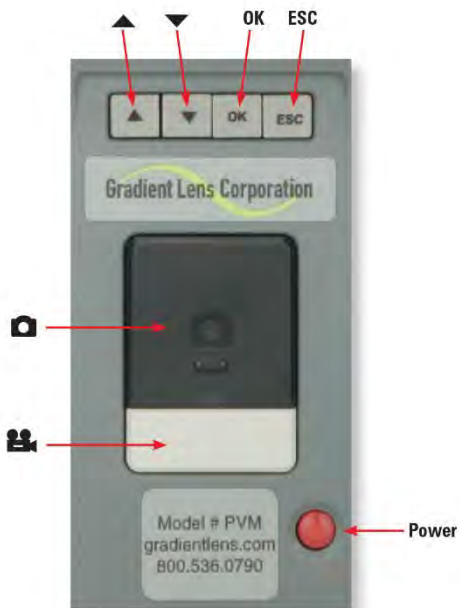

Power ON / OFF

Turn the PVM's power on by pressing and holding the power button for 2-5 seconds. The Gradient Lens logo will appear. The word CAMERA and the battery and memory status indicators will then appear for a few seconds.

When these indicators disappear the unit is in Normal Mode, displaying a live image from the camera at the tip of the insertion tube.

To turn the unit off, push and hold the power button for 1-2 seconds until it turns off.

Operating Modes

There are three operating modes:

Normal Mode

Displays current camera input and date/time. From this mode, still pictures and video are captured.

Image Review Mode

Displays captured still pictures and video.

Menu Mode

File maintenance, system settings, etc.

The unit powers up in Normal Mode.

From Normal Mode:

Enter Image Review Mode by pressing ▲ or ▼

Enter Menu Mode by pressing OK.

Return to Normal Mode from any other mode by pressing ESC.

Adjust Light Intensity

The Hawkeye® Classic Flexible Video Borescope has a fully integrated LED light source. Control the intensity of the LED output using the thumb wheel light switch on the main unit.



NDT Supply.com, Inc.

7952 Nieman Road
Lenexa, KS 66214-1560 USA



OPERATION

Hawkeye® Classic Flexible Video Borescope User Guide

Hawkeye® Classic Flexible Video Borescope User Guide

OPERATION

Normal Mode:

Capture a Still Photo

In Normal Mode, press the large black  button. If you hold the button down, the captured image will remain displayed until the button is released.

Still photo files are saved as .JPG.

Capture a Video Clip

In Normal Mode, press the gray  button to start recording. The elapsed time display will be visible in the lower left of the image to indicate that you are recording. Press the  button again to stop recording and save the clip. Pressing the  button will also stop the recording process and save the clip. Video files are saved as .ASF.

Memory & Battery Charge Indicators

In Normal Mode, press ESC to display the memory and battery indicators. Memory capacity remaining is displayed as a percentage. Low battery power is indicated by the battery status indicator depicting a less than full charge and turning yellow.

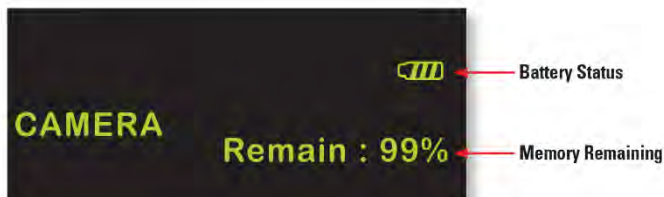


Image Review Mode:

View Captured Photos or Video Clips

Push the  or  button to enter Image Review Mode. You can scroll forward or back through the photos and videos using the  or  buttons. Video files may be played, paused, and resumed by pressing the  button. While a still or video file is displayed (video not playing), pressing the OK button will bring up the DELETE menu. Select YES and press OK to delete the file. To exit Image Review Mode, press ESC.

Delete a Single File

Press  or  to enter Image Review Mode. Scroll to the required file using the  or  buttons. When the required photo or video file is displayed, press OK. A frame will be displayed to confirm the delete function.

Select YES with  or  and press OK to confirm.



Menu Mode:


Display Main Menu

In Normal Mode:

Press the OK button to display the Main Menu as follows:

DELETE ALL
VIDEO OUTPUT
DATE/TIME SETUP
LANGUAGE
VIDEO FORMAT
AUTO POWER OFF

You can scroll through the functions on this menu using the  and  buttons, and select the function using the OK button.

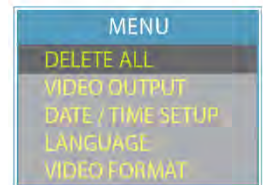



Menu Mode:

Delete All

Deletes all saved files, video and still photos. When this function is selected, the unit displays a frame which includes two options. Use ▲ and ▼ to select YES or NO and press OK to confirm.

ERASE ALL	
YES	NO

Video Output

This function transfers the video signal to and from an auxiliary display using the supplied cable. The unit will automatically switch to the auxiliary display when the cable is connected, and will revert to the built in display when the cable is disconnected. This function will allow you to toggle between displays if both are connected. Simply press OK while this function is selected to toggle between displays.

MENU
DELETE ALL
VIDEO OUTPUT
DATE / TIME SETUP
LANGUAGE
VIDEO FORMAT

Date / Time Setup

Select this function and use the ▲ and ▼ buttons to select year/month/day or hour/minute/second fields, then press the ⏏ and/or ⏏ buttons to scroll through the numbers to set the date and time. If DISPLAY indicates ON status, the date and time will be displayed on the screen. Captured images will always include a time/date stamp. Confirm changes by pressing OK.

MENU	TIME SET
DELETE ALL	2008 / 01 / 01
VIDEO OUTPUT	00 : 00 : 00
DATE / TIME SET	DISPLAY ON
LANGUAGE	
VIDEO FORMAT	

Menu Mode:

Language

If your unit is supplied with a language option this function will allow you to select English or the optional language.

Video Format

This function allows you to choose the format of the output video signal for an auxiliary display. The options are NTSC and PAL. Use the ▲ and ▼ to select and press OK to confirm.

MENU	TV OUTPUT
DELETE ALL	NTSC
VIDEO OUTPUT	PAL
DATE / TIME SETUP	
LANGUAGE	
VIDEO FORMAT	

While the TV OUTPUT options are displayed, pressing the ⏏ button will display the FACTORY SETUP menu. Here the factory settings for the video display may be changed or reset. Use ▲ and ▼ then press OK to select the property to be changed. Then use ▲ and ▼ to change the setting and OK to confirm. Holding the ▲ or ▼ buttons down for a couple of seconds will cause the settings to change more rapidly. DEFAULT restores the original factory settings.

MENU	
BRIGHTNESS	128
CONTRAST	120
HUE	114
SATURATION	90
DEFAULT	

Menu Mode:

Auto Power Off

Select this function by pressing the OK button and use the ▲ and ▼ buttons to select time for AUTO POWER OFF or to disable the auto power off function. Press OK to confirm.

MENU	AUTO OFF
VIDEO OUTPUT	DISABLE
DATE / TIME SET	5 MIN
LANGUAGE	10 MIN
VIDEO FORMAT	15 MIN
AUTO POWER OFF	30 MIN

Connecting to an Auxiliary Display

Use the included AV cable to connect your auxiliary display to the jack on the side of the PVM. **Note:** The display must accept a composite input. The unit will automatically switch to the auxiliary display when the cable is connected. You may switch between the displays by using the VIDEO OUTPUT function on the main menu. The PVM display and the external display cannot be viewed at the same time.

AV Cable



Video Out



The video output format to the auxiliary display may be switched between NTSC and PAL by using the VIDEO FORMAT function on the main menu.

Transferring Image Files to a PC

The PVM can download saved images through its USB port. Plug in the Mini USB 1.1 connector of the included USB cable into the USB port on the PVM. Then plug the other end into a USB port on your PC and open the drive associated with the chosen port. The stored images are contained in the location X:\DCIM\100MEDIA where X is the drive letter. JPGs can be viewed with Windows Picture Viewer, and .ASF video files play in Windows Media Player.

USB Cable



Alternatively, the SD memory card may be removed from the PVM and inserted into your computer's card reader.

Notes:

- Do not remove the SD memory card during capture operations – data will be lost and the memory card may be damaged
- We recommend 80X SD cards or faster for best quality video clips
- Use cotton swabs and lens cleaning solution or isopropyl alcohol (rubbing alcohol) to clean the insertion tube tip

TROUBLESHOOTING

Hawkeye® Classic Flexible Video Borescope User Guide

Hawkeye® Classic Flexible Video Borescope User Guide

SPECIFICATIONS

PVM Troubleshooting Tips


Nothing on LCD screen: Battery power too low. Recharge the battery.

No image – but words and status symbols on LCD display: Insertion tube is not connected securely. Reattach the insertion tube.

Cannot capture photos or video: No SD card inserted.

Shut down: Battery has discharged below operating threshold. Recharge battery.

!!! No functions working!!! If all functions freeze or fail, first try to power the unit off and restart. If the unit does not recover insert a non-conducting probe, such as a toothpick, into the hole on the back of the PVM and use it to press the internal reset button to perform a system reset.

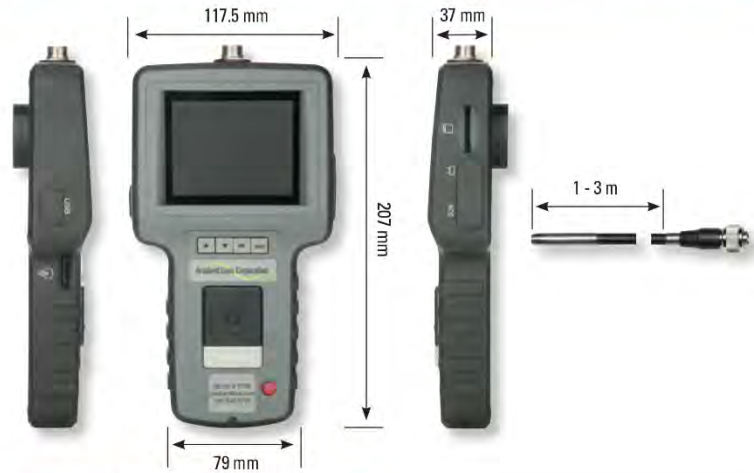

Insertion Tube Specifications

Image Sensor	CMOS Image Sensor
Resolution (Dynamic/Static)	320(H) X 240(V) / 640(H) X 480 (V)
Insertion Tube Tip Diameter	5.5 mm
Frame Rate	~30 fps
Exposure	Automatic
White Balance	Fixed
Field-of-View (FOV)	50°
Depth-of-Field (DOF)	15 - 100 mm
System Magnification	6X at 15 mm
Light Source	4 White LED
Working Temperature	-20° to 70° C

PVM Specifications

Power	DC 5V
Display	3.5" TFT LCD Monitor 320 x 240 Pixels
Interface	Mini USB 1.1 / AV Out
Battery	Rechargeable Li-Polymer Battery (3.7V)
Video Output Format	NTSC & PAL
Recording Medium	SD Card (Capacity up to 2G)
Still Image Storage Format	JPEG (640 x 480)
Video Recording Storage Format	ASF (320 x 240)
Language	English + option (One language)
Working / Storage Temperature	-20° to 60° C
While Charging Battery Temperature	0° to 40° C

NDT Supply.com, Inc.

7952 Nieman Road
Lenexa, KS 66214-1560 USA



NOTICES / WARNINGS

Hawkeye® Classic Flexible Video Borescope User Guide

Hawkeye® Classic Flexible Video Borescope User Guide

WARRANTY / SERVICE

USA

This device has been tested to be in compliance with part 15, Class A of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canada

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.



Warnings

- Do not use this product in an explosive atmosphere
- Do not use chemical cleaners or solvents to clean the plastic surfaces of the PVM or Insertion Tube
- Do not open the product – there are no user serviceable parts
- Handle product carefully and do not crush or bend the insertion tube beyond its normal operating bend radius
- This product is not intended for medical use
- Do not use in direct sunlight
- Store product in a dry, adequately ventilated area

Warranty

Gradient Lens Corporation warrants the Hawkeye® Classic Flexible Video Borescope to be free of defects in material and workmanship and to perform in accordance with the manufacturer's specifications when subject to normal use and service for a period of one year from the date of purchase. Gradient Lens Corporation will either repair or replace components found to be defective or at variance from the manufacturer's specifications within this time at no cost to the customer. It shall be the purchaser's responsibility to return the instrument to the authorized service center.

This warranty does not cover breakage or failure due to tampering, misuse, neglect, accidents, improper installation, modification, shipping, or to improper maintenance, service, and cleaning procedures. This warranty is also void if the instrument is not used in accordance with the manufacturer's recommendations, or if required service is performed by anyone other than a Gradient Lens Corporation authorized agent. No other express or implied warranty is given.

Service

Should service of the equipment be required:

Call Gradient Lens Corporation to obtain a return material authorization (RMA) number and shipping directions.

Telephone:585.235.2620

Fax:585.235.6645

E-mail:Service@GradientLens.com

Toll Free:800-536-0790 (in US only)

Phone: 913-685-0675
Fax: 913-685-1125

sales@ndtsupply.com
www.ndtsupply.com